

Components	Part Number
MAIN LANDING GEAR STRUT	27-51500-001
Kearfott INS/GPS	8888-K160A142-02
PROPELLER	P6525322-0407
MODE-S ATC/TCAS CONTROL PANEL	G6993-07
FUEL CONTROL UNIT	897801-2
TRIM ACTUATOR	27-19008-006
ED-102G ELECTRONIC DISPLAY	8095686-1001
PROCESSOR,RADAR DATA	066-01146-1211
IGNITION	3070378-2
CONVERTER,SIGNAL DATA	8800700008-2
RECORDER CVR	93-A100-10
GNS-XLS FMS	17960-0203-0003
TRANSDUCER	27-19156-003
EFIS1 ED 5X5H-L-BLK	8095686-1005
BOOT,DE-ICER,RH	25S-5D5071-02
ED-102G ELECTRONIC DISPLAY	8095686-1001
STARTER GENERATOR	23079-010
GENERATOR,DIRECT CURRENT	300SG119Q
GOVERNOR. PROPELLER OVERSPEED	8210-161
EXCITER IGNITION	10-392000-2
POWER PACK	99-388002-11
PROP PITCH CONTROL	895481-20
PS-578 CONTROL HEAD (TCAS)	071-01618-0128
ACTUATOR AILERON	27-76016-075
RECEIVER-TRANSMITTER,RADAR	066-1107-00
FLAP CONTROLLER	8496
TCAS CONTROL PANEL	071-01568-0101
STARTER-GENERATOR,ENGINE,NONAIRCRAFT	300SG121Q
LANDING GEAR POSITION INDIC.	27-82186-021
POWER SUPPLY	27-82461-001
QAD ASSY,STARTER GE	300SG1083
PUMP HIDRAULIC	PV3-044-26
AUDIO CONTROL SYSTEM	990-3333-006
ENGINE MOUNT	93800-05
WINSHIELD	26-21195-9001
OIL COOLER	27-19255-001
PANTALLA OMEGA	066-4012-33
GC 362A GRAPHICS COMPUTER	071-01505-0203
FUEL SHUTOFF VALVE	394230-9-1
NAV COMPUTER FMS	066-4011-26
GPWS	965-0686-001
CYLINDER ASSEMBLY,ACTUATING,LINEAR	5007436
TUBE ASSY FLAP UP	27-81032-135
HEAT EXCHANGER	189822-1
ANGLE OF ATTACK TRANSDUCER	25147A-5
TEMPERATURE COMPENSADOR	9919350CH

FUEL SENSOR	PAA574-4
NOSE LANDI ACTUATOR	27-52010-003
CONTROL,GYROSCOPE,ATTITUDE-HEADING	060-0013-01
TRANSDUCER,MONOPOLE	1680-640
HEAT ECHANGER ASSY	27-62062-057
CHAIN ASSY (LH,RH)	27-71026-001
TRANSPONDER	066-01143-0301
PUMP FUEL	897400-7
FLAP ACTUTOR	27-36053-003
GENERATOR TACHOMETER	AG-44-A-1
BLOWER CONDESER	SZ84-002-1
BOMBA DE EMBANDERAMIENTO	C-4033-E
HYD SHUF OFF VALVE	27-19147-001
TURBINE COOLING	204755-4-6
ELECTRONIC COMPONENTS ASSEMBLY	060-0016-00
GENERAL CONTROL UNIT	51509-002B
GOVERNOR,TURBINE ENGINE	897410-16
BLADE ASSY	14-99403-03